 


Purpose

WNC-1 voltage indicator is designed to measure and indicate the value of 1-phase AC voltage in the range of 80÷500 V AC.

Functioning

The measured voltage value is indicated directly in numerical form on the 3-digit LED display. Voltage is displayed with a resolution of 1 V, measurement is updated five times per second.



Mounting


- 1. Disconnect the power supply.
- 2. Install the indicator on the rail in the distribution board.
- Connect the indicator to the source of measured voltage according to the diagram.



It is recommended to protect the indicator with a slowblow fuses with a rating current of 0.25 or the circuit breaker with B characteristics and rating current of 1 A.

4.Switch on the power supply and verify that the device is working correctly.

Wiring diagram

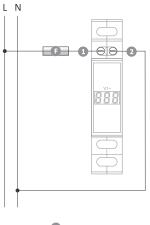



Technical data

power supply	80÷500 V AC
frequency	50÷60 Hz
voltage indicator	3-digits, 7-segment LED
digit height	7 mm
measurement resolution	1 V
measurement accuracy	1% (±1 digit)
power consumption	<5 VA, <1 W
working temperature	-5÷40°C
storage temperature	-25÷70°C
terminal	1.5 mm ² screw terminals
tightening torque	0.4 Nm
dimensions	1 module (18 mm)
mounting	on TH-35 rail
ingress protection	IP20

Warranty

F&F products are covered by a 24-month warranty from the date of purchase. The warranty is only valid with proof of purchase. Contact your dealer or contact us directly.

CE declaration

F&F Filipowski sp. j. declares that the device is in conformity with the essential requirements of The Low Voltage Directive (LVD) 2014/35/EU and the Electromagnetic Compatibility (EMC) Directive 2014/30/UE. The CE Declaration of Conformity, along with the references to the standards in relation to which conformity is declared, can be found <u>www.fif.com.pl</u> on the product subpage.